Boston University Classrooms

COM-210/212 — QUICK-START OPERATION INSTRUCTIONS: CRESTRON TSW-750 CONTROL PANEL

- TURN ON THE MEDIA SYSTEM & SELECT SOURCE:
 - Touch the screen to activate.
 - Press the button along the bottom that states "Please touch here to start your presentation". The projector will turn on and warm up (40 seconds)
 - Choose **COMPUTER SOURCE** or **DVD/VCR** along the bottom of the control panel
 - **COMPUTER**: Select your source (Wall Interface/Rack Interface, etc.). Connect your laptop using either the VGA or HDMI cable provided
 - DVD/VCR: Insert your DVD or VHS tape into the combo player in the A/V cabinet
 - Lower the manual projection screen
 - Note: VGA and HDMI cables are provided in the rack drawer in the A/V cabinet. There is also a backup VGA and HDMI input available in the rack.
- 3 ADJUST VOLUME:
 - Touch VOLUME button, then use the "Volume Up/Down" buttons to adjust the level.
 - Be sure that "Volume Mute" is not highlighted

 NOTE: This controls volume for Computer Audio, DVD & VHS sources. Remember to check
 the volume on your laptop.
- **TURN OFF THE SYSTEM AFTER USE:**
 - Touch the POWER button on the bottom right.
 - When asked, confirm that you want to turn the system off.
 - Return the projection screen to the raised position
 NOTE: During this 2 minute cool down process, system restart cannot occur
- QUESTIONS OR EQUIPMENT PROBLEMS?:
 - For immediate assistance, please call LETS at (617) 353-3227
 - Send an email to <u>classrooms@bu.edu</u> to report equipment issues





