## **Boston University** Classrooms

PSY/SOC — QUICK-START OPERATION INSTRUCTIONS: CRESTRON TSW-750 CONTROL PANEL W/ COMPUTER

- TURN ON THE MEDIA SYSTEM & SELECT SOURCE:
  - Touch the screen to activate.
  - Press the button along the bottom that states "Please touch here to start your presentation". The projector will turn on. Lower the manual projection screen.
  - Choose **COMPUTER SOURCE** or **DVD/VCR** along the bottom of the control panel
  - **COMPUTERS:** Select your source (more options are available by swiping to the left). Select DESKTOP to use the built-in computer. To connect wirelessly, select the AirMedia option and follow the instructions on the screen
  - DVD/VCR: Insert your DVD or VHS tape into the combo player in the A/V
    cabinet. Media can be controlled directly from the control panel (no remote
    control is necessary)
  - Note: VGA and HDMI cables are provided in the rack drawer in the A/V cabinet. There is also a backup VGA and HDMI input available in the rack.
- 2 ADJUST VOLUME:
  - Touch VOLUME button, then use the "Volume Up/Down" buttons to adjust the level.
  - Be sure that "Volume Mute" is not highlighted

    NOTE: This controls volume for Computer Audio, DVD & VHS sources. Remember to check
    the volume on your laptop.
- 3 TURN OFF THE SYSTEM AFTER USE:
  - Touch the POWER button on the bottom right.
  - When asked, confirm that you want to turn the system off.
  - Please return the manual projection screen to the raised position.

    NOTE: During this brief cool down process, system restart cannot occur
- QUESTIONS OR EQUIPMENT PROBLEMS?:
  - For immediate assistance, please call LETS at (617) 353-3227
  - Send an email to <u>classrooms@bu.edu</u> to report equipment issues





