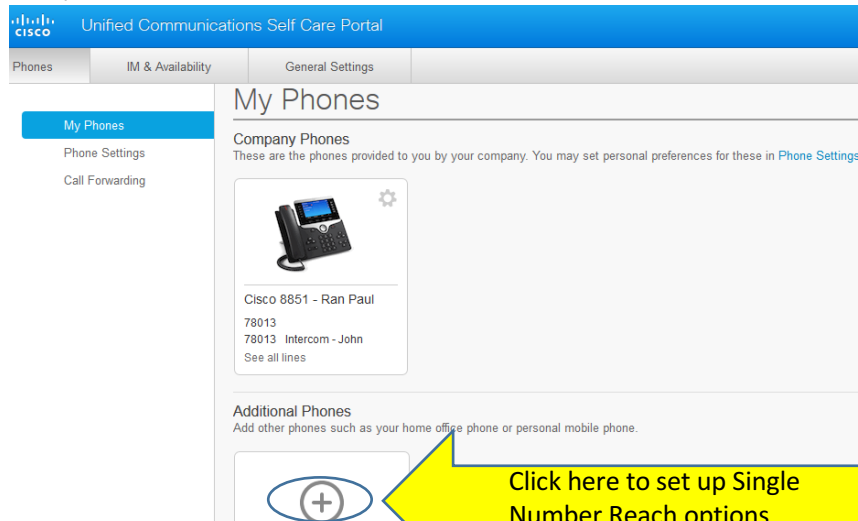


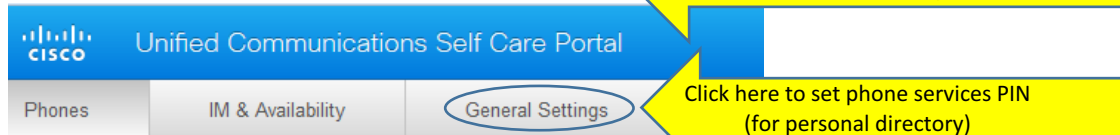
Self Care Portal

To customize your phone options for speed dial, call forwarding and mobility:

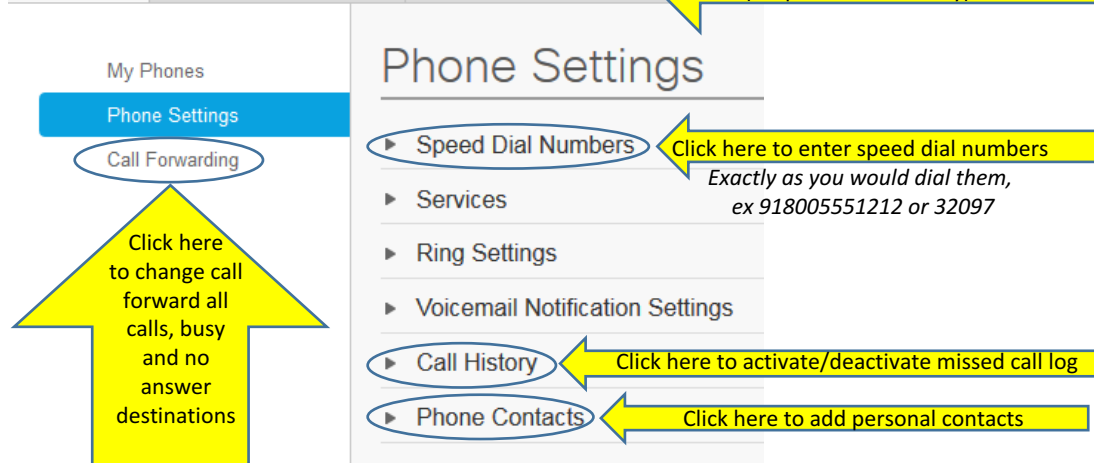
- From a web browser enter: <https://mybuphone.bu.edu/ucmuser/>
- Enter your BU ID
- Enter your Kerberos password
- Click Sign In



Click here to set up Single Number Reach options



Click here to set phone services PIN (for personal directory)



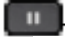


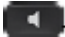





Click here to enter speed dial numbers
Exactly as you would dial them,
ex 918005551212 or 32097

Click here to activate/deactivate missed call log

Click here to add personal contacts

Click here to change call forward all calls, busy and no answer destinations

Cisco 7841 Quick Reference Card

1. Handset light strip - Indicates an incoming call (flashing red) or voice mail message (steady red)
2. Line and Feature Buttons -
Solid green = active call
Flashing green = held call
Flashing amber = incoming call
Solid red = shared line in use
3. Soft Key buttons – engages the associated feature in the display
4. Navigation Pad and Select Buttons –Used to scroll through menus and highlight active calls and features. While on-hook, pressing up displays your Recent call list; pressing down displays Speed dials
5. Hold Button 
Transfer Button 
Conference Button 
6. Speaker Button  Activates (steady green) and deactivates the speakerphone
Mute Button  Deactivates (steady red) and reactivates the microphone
Headset Button  Activates (steady green) and deactivates the user provided headset
7. Messages Button  Press to access voice mail
Directory Button  Personal and Corporate (University) Directory look-up access
Application Menu Button  Call history, Preferences (set ringtones, display contrast)
8. Up/Down Volume Rocker – Adjusts ringer volume while on hook; adjusts handset, speaker and headset volumes while off-hook



For Assistance:
Call Communication
Services Help Desk
3-2097

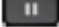
Placing Calls

To place a call:

- Lift the handset or Press Speaker button or Press the Headset button or Press the New call softkey or Press a session button

- Dial the number

To place a second call on the same line:

- Press Hold 
- Press New Call softkey
- Dial number

To call another BU telephone (617-352, 353, 358 exchanges):

- Dial the 5 digit telephone number

To call a BMC telephone (617-414, 638 exchanges):

- Dial 10 digit telephone number

To Place an outside call:

- Dial 1+10 digit telephone number
- If dialing an International call, enter number + authorization code then hit submit.

To call Emergency Services:

- Dial 911

To redial last number called:

- Press the Redial softkey

To place a speed dial call:

- While on-hook, enter the speed dial code
- Press the Speed dial softkey

Ending Calls

To end a call:

- Replace the handset
or Press Speaker button
or Press the Headset button
or Press the End call softkey
or Press the Release button

Answering Calls

To answer an incoming call:

- Lift the handset or Press Speaker button or Press the Headset button or Press the New call softkey or Press flashing line button

To answer a second incoming call:

- Press the flashing line button

To answer a call on a shared line:

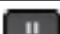
- Press the ringing line button
- Press the flashing session button

Call Hold

To place a call on hold:

- Press Hold 

To retrieve a held call:

- Press Hold  *or*
Press the Resume softkey or
Press the flashing line button

To toggle between held calls on the same line:



- Press the flashing session button

To toggle between held calls on different lines:

- Press the line button
- Press the flashing session button

Call Transfer

To transfer a call:

- Press Transfer 
- Dial the number
- Option: announce the caller
- Press Transfer  *or* the Transfer softkey


If no answer or the line is busy:

- Press the Cancel softkey
- Press the Resume softkey or Press the flashing line button

To toggle between calls:


- Press the Swap softkey

To transfer two calls on the same line to one another:

- While connected  an active call, press Transfer
- Press the flashing line button
- Press the Yes softkey

Call Forward All Calls

To immediately forward your incoming calls to another number:

- While on-hook, press Fwd All softkey
- Dial the extension number or Press the Messages  button

To deactivate call forwarding:

- Press the Fwd off softkey


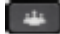
Do Not Disturb

To disable/ re-enable the ringer for all incoming calls:


- While on-hook, press the DND softkey

Conference Calling

To place up to a 16 way conference call:

- While connected to an active call, press Conference 
- Dial the next participant
- Option: announce the conference
- Press Conference  *or* the Conference soft key
- Repeat the above steps to add additional attendees

To add an incoming caller to an existing conference:

- While connected to the incoming call, press Conference 
- Press the flashing line button
- Press the Yes softkey to complete the conference

To view conference participants:

- Press the Details soft key

To remove a participant:

- Navigate to the participant to be removed
- Press the Remove softkey

Single Number Reach (SNR)

To activate/deactivate SNR from your desk phone:

- Press the Mobility softkey
- Press the Select softkey to enable/disable Mobile Connect

To switch the call from your desk to your remote phone:

- While connected to the call, press the Mobility softkey
- Press the Select softkey to send the call to the remote phone
- Answer the remote phone

To switch from your remote phone to your desk phone:

- Hang up the call on your remote phone
- Press the line button on your desk phone