


Step 17: Make the trigger

Take out the three eye screws and the steel looped pin (these are in the hardware bag). Screw one of the eye screws on each side of the trough beams as shown:

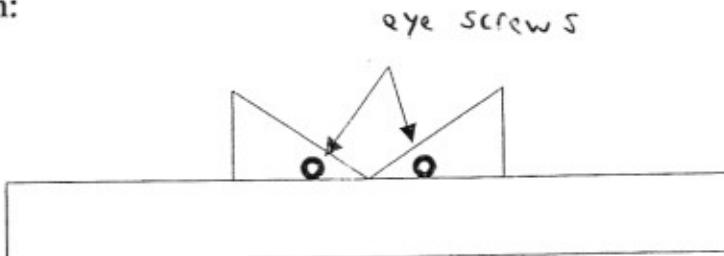

Make sure that the loop in the screw is sticking out from the wood. Screw the last eye screw into the bottom of the arm so that when the arm is ready to fire, the loop in the eye screw is lined up with the other two and the steel looped pin can hold the arm in place.

