
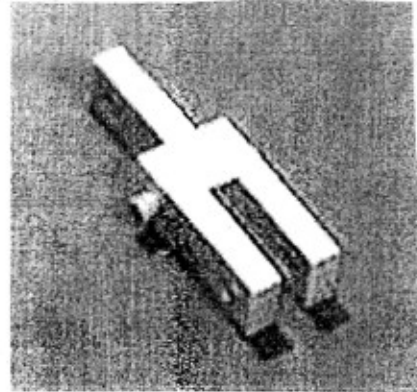



Step 3: Counterweight hanger

Take out the counterweight hangers and 1 counterweight peg. Assemble the pieces as shown in the pictures below. Do not use glue!

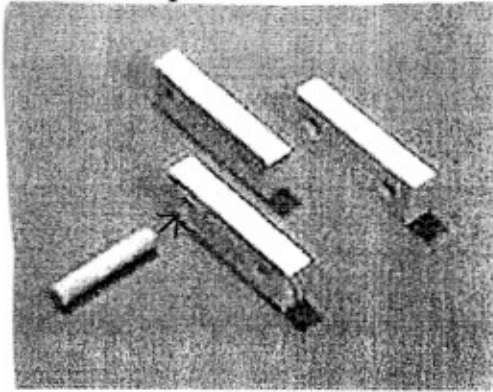

Step 4: Assemble arm

Take out the two arm reinforcing pieces and the arm. Glue the reinforcing pieces to the arm as shown in the picture. Make sure the holes line up.

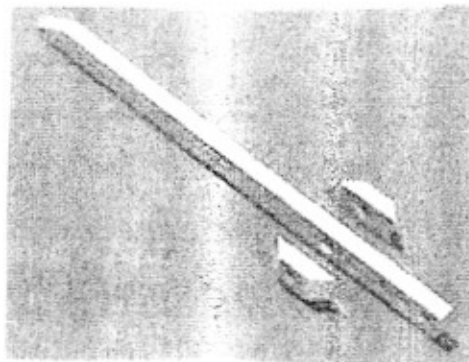

Tape the finished pieces together to let the glue dry. The finished arm should look like this (from the top):

