



Step 12: Take the metal pin out of the hardware bag. Put a little glue in the hole at the end of the arm, and insert the metal pin into the hole as shown:

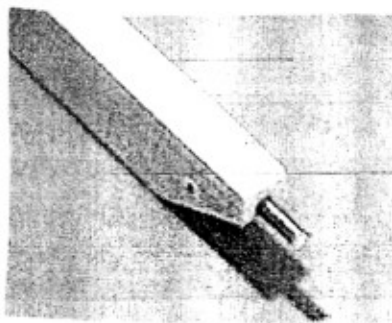

Step 13: Install the arm

Take out the 6.5" axle dowel. Also, take out two small dowel pins from the hardware bag. Install the arm on the frame and secure the axle with the small dowel pins.

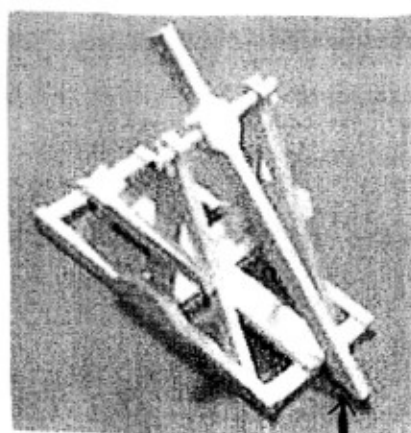

Make sure the  
arm looks like  
this